

41-2794 Starter Relay Installation Instructions

1. Remove wire from S Terminal (2 on the starter) and connect to Wire B (blue wire with blue butt connector)
2. Connect 2 (spade terminal) to S Terminal (2 on the starter)
3. Connect 1 to Starter Terminal
4. Connect G to Ground

